

Tableau de conversion Pression - couple

Clé Hydraulique **Y 1**

Carré conducteur 3/4"



Réglez la pression hydraulique en PSI ou en BAR sur votre pompe. Vous obtiendrez les couples correspondants sur la clé.

Pression : Couple

PSI : Bars Newton mètre

1000	70	160
1200.....	84.....	192
1400.....	98.....	225
1600.....	110.....	248
1800.....	124.....	283
2000	138	319
2200.....	152.....	351
2400.....	165.....	384
2600.....	179.....	416
2800.....	193.....	449
3000	207	481
3200.....	220.....	515
3400.....	234.....	549
3600.....	248.....	583
3800.....	262.....	617
4000	276	651
4200.....	290.....	683
4400.....	303.....	716
4600.....	317.....	748
4800.....	331.....	781
5000	345	813
5200.....	358.....	846
5400.....	372.....	878
5600.....	386.....	911
5800.....	400.....	943
6000	414	976
6200.....	427.....	1009
6400.....	441.....	1041
6600.....	455.....	1074
6800.....	468.....	1106
7000	482	1139
7200.....	496.....	1171
7400.....	510.....	1204
7600.....	524.....	1236
7800.....	538.....	1269
8000	552	1301
8200.....	565.....	1334
8400.....	579.....	1366
8600.....	593.....	1399
8800.....	607.....	1432
9000	620	1464
9200.....	634.....	1497
9400.....	648.....	1529
9600.....	662.....	1562
9800.....	676.....	1594
10000	690	1627

www.hytorc-services.com

Tableau de conversion Pression - couple

Clé Hydraulique **Y 3**

Carré conducteur 1''



Réglez la pression hydraulique en PSI ou en BAR sur votre pompe. Vous obtiendrez les couples correspondants sur la clé.

Pression : Couple

PSI : Bars Newton mètre

1000	70	396
1200.....	84.....	477
1400.....	98.....	559
1600.....	110.....	627
1800.....	124.....	709
2000	138	792
2200.....	152.....	873
2400.....	165.....	954
2600.....	179.....	1036
2800.....	193.....	1117
3000	207	1198
3200.....	220.....	1280
3400.....	234.....	1361
3600.....	248.....	1442
3800.....	262.....	1524
4000	276	1605
4200.....	290.....	1685
4400.....	303.....	1766
4600.....	317.....	1846
4800.....	331.....	1926
5000	345	2006
5200.....	358.....	2087
5400.....	372.....	2167
5600.....	386.....	2247
5800.....	400.....	2327
6000	414	2408
6200.....	427.....	2488
6400.....	441.....	2568
6600.....	455.....	2648
6800.....	468.....	2729
7000	482	2809
7200.....	496.....	2889
7400.....	510.....	2969
7600.....	524.....	3050
7800.....	538.....	3130
8000	552	3210
8200.....	565.....	3290
8400.....	579.....	3371
8600.....	593.....	3451
8800.....	607.....	3531
9000	620	3611
9200.....	634.....	3692
9400.....	648.....	3772
9600.....	662.....	3852
9800.....	676.....	3932
10000	690	4013

www.hytorc-services.com

Tableau de conversion Pression - couple

Clé Hydraulique **Y 5**

Carré conducteur 1" 1/2



Réglez la pression hydraulique en PSI ou en BAR sur votre pompe. Vous obtiendrez les couples correspondants sur la clé.

Pression : Couple

PSI : Bars Newton mètre

1000	70	753
1200.....	84.....	906
1400.....	98.....	1059
1600.....	110.....	1196
1800.....	124.....	1350
2000	138	1505
2200.....	152.....	1658
2400.....	165.....	1811
2600.....	179.....	1964
2800.....	193.....	2117
3000	207	2271
3200.....	220.....	2424
3400.....	234.....	2577
3600.....	248.....	2730
3800.....	262.....	2883
4000	276	3037
4200.....	290.....	3188
4400.....	303.....	3340
4600.....	317.....	3492
4800.....	331.....	3644
5000	345	3796
5200.....	358.....	3948
5400.....	372.....	4099
5600.....	386.....	4251
5800.....	400.....	4403
6000	414	4555
6200.....	427.....	4707
6400.....	441.....	4858
6600.....	455.....	5010
6800.....	468.....	5162
7000	482	5314
7200.....	496.....	5466
7400.....	510.....	5618
7600.....	524.....	5769
7800.....	538.....	5921
8000	552	6073
8200.....	565.....	6225
8400.....	579.....	6377
8600.....	593.....	6529
8800.....	607.....	6680
9000	620	6832
9200.....	634.....	6984
9400.....	648.....	7136
9600.....	662.....	7288
9800.....	676.....	7440
10000	690	7591

www.hytorc-services.com

Tableau de conversion Pression - couple

Clé Hydraulique **Y 8**

Carré conducteur 1" 1/2



Réglez la pression hydraulique en PSI ou en BAR sur votre pompe.

Vous obtiendrez les couples correspondants sur la clé.

www.hytorc-services.com

Pression : Couple
PSI : Bars Newton mètre

1000	70	1102
1200.....	84.....	1325
1400.....	98.....	1549
1600.....	110.....	1753
1800.....	124.....	1978
2000	138	2203
2200.....	152.....	2427
2400.....	165.....	2650
2600.....	179.....	2874
2800.....	193.....	3098
3000	207	3321
3200.....	220.....	3545
3400.....	234.....	3769
3600.....	248.....	3992
3800.....	262.....	4216
4000	276	4440
4200.....	290.....	4663
4400.....	303.....	4887
4600.....	317.....	5111
4800.....	331.....	5334
5000	345	5558
5200.....	358.....	5780
5400.....	372.....	6003
5600.....	386.....	6225
5800.....	400.....	6447
6000	414	6670
6200.....	427.....	6892
6400.....	441.....	7114
6600.....	455.....	7337
6800.....	468.....	7559
7000	482	7781
7200.....	496.....	8003
7400.....	510.....	8226
7600.....	524.....	8448
7800.....	538.....	8670
8000	552	8893
8200.....	565.....	9115
8400.....	579.....	9337
8600.....	593.....	9560
8800.....	607.....	9782
9000	620	10004
9200.....	634.....	10227
9400.....	648.....	10449
9600.....	662.....	10671
9800.....	676.....	10894
10000	690	11116

Tableau de conversion Pression - couple

Clé Hydraulique **Y 10**

Carré conducteur 1" 1/2



Réglez la pression hydraulique en PSI ou en BAR sur votre pompe.
Vous obtiendrez les couples correspondants sur la clé.

www.hytorc-services.com

Pression : Couple
PSI : Bars Newton mètre

1000	70	1349
1200.....	84.....	1634
1400.....	98.....	1918
1600.....	110.....	2128
1800.....	124.....	2413
2000	138	2698
2200.....	152.....	2982
2400.....	165.....	3267
2600.....	179.....	3552
2800.....	193.....	3836
3000	207	4107
3200.....	220.....	4392
3400.....	234.....	4677
3600.....	248.....	4961
3800.....	262.....	5246
4000	276	5531
4200.....	290.....	5816
4400.....	303.....	6100
4600.....	317.....	6385
4800.....	331.....	6670
5000	345	6968
5200.....	358.....	7252
5400.....	372.....	7537
5600.....	386.....	7822
5800.....	400.....	8106
6000	414	8391
6200.....	427.....	8676
6400.....	441.....	8974
6600.....	455.....	9259
6800.....	468.....	9557
7000	482	9842
7200.....	496.....	10126
7400.....	510.....	10411
7600.....	524.....	10696
7800.....	538.....	10980
8000	552	11279
8200.....	565.....	11563
8400.....	579.....	11848
8600.....	593.....	12133
8800.....	607.....	12417
9000	620	12702
9200.....	634.....	12987
9400.....	648.....	13271
9600.....	662.....	13556
9800.....	676.....	13841
10000	690	14125